




# iPod Nano 7th Generation Bluetooth Antenna Replacement

Replace the Bluetooth antenna in a 7th Generation iPod Nano.

Written By: Sam Lionheart

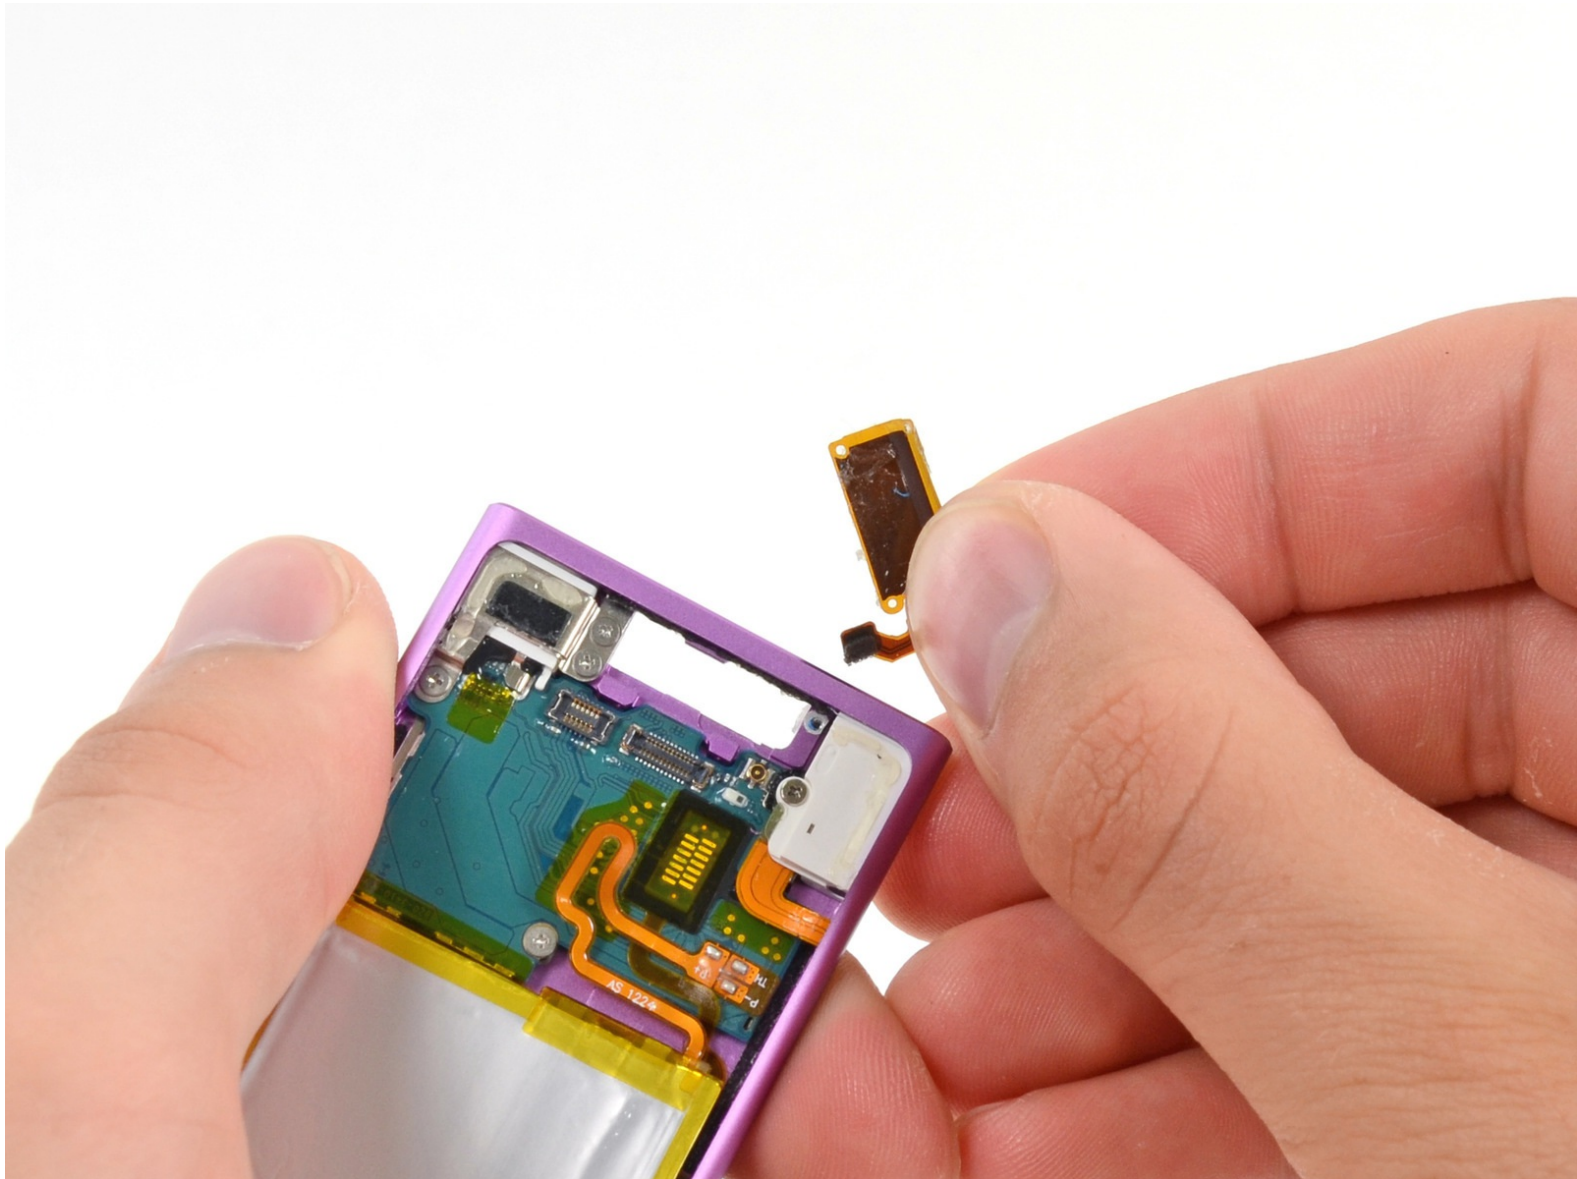

## INTRODUCTION

This guide will walk you through the instructions for replacing the Bluetooth antenna on a 7th Gen iPod Nano.

---



### TOOLS:

- [iOpener](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — iOpener Heating



- ⓘ We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
- ⚠ For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

## Step 2



- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.

## Step 3



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.
- ⚠ The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

## Step 4 — Front Panel Assembly



- Lay the iOpener over the plastic tab to loosen the adhesive. Let the bag sit on the device for approximately 90 seconds before attempting to open the panel.




## Step 5




- Use a plastic opening tool to pull the rear plastic cover away from the device until there is enough room to insert a spudger.
- Insert a spudger under the cover, then pry it up and away from the device.
- Remove the rear plastic cover from the iPod.


 Be very careful in removing the plastic cover as the bluetooth antenna is adhered to it.

## Step 6

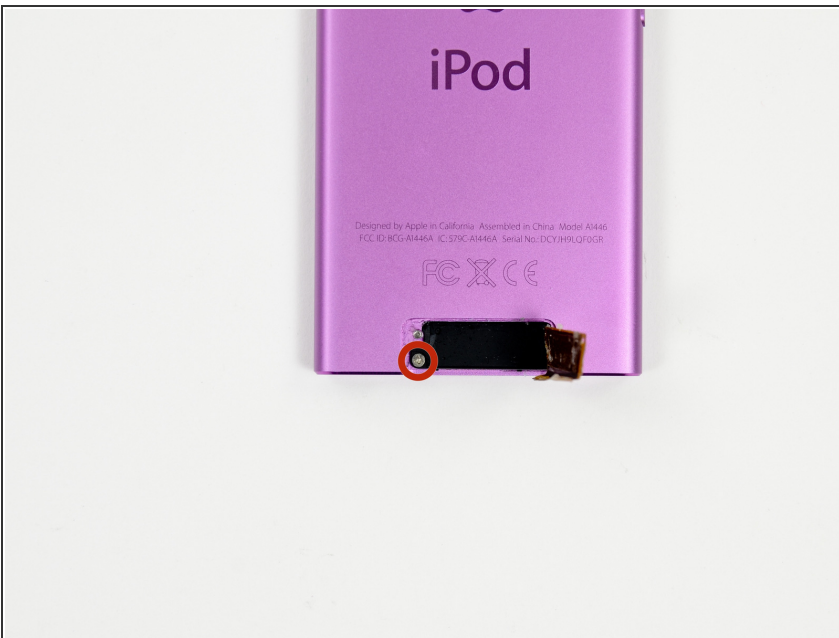


-  Gently bend the Bluetooth antenna to the right, out of the way of the screws in the bottom of the device.
- Remove the single 1.4 mm Phillips #000 screw from the black plastic spacer.

## Step 7

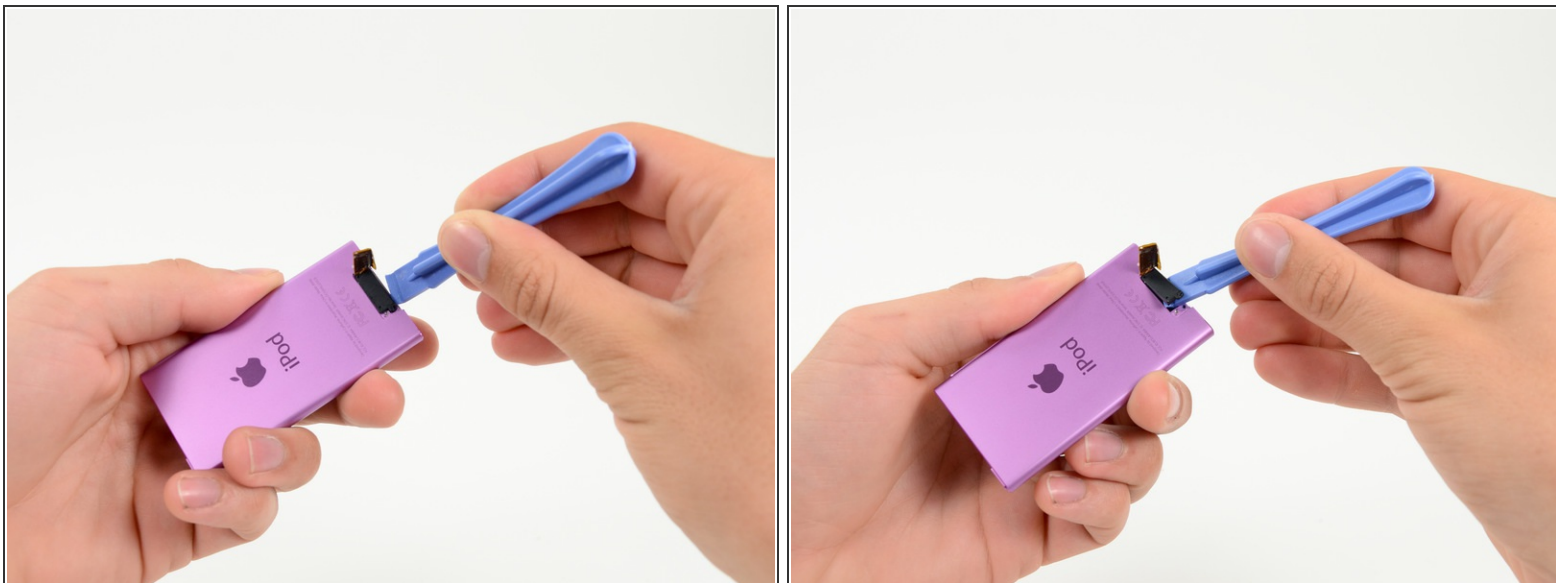

- Use a plastic opening tool to remove the black plastic spacer from the Nano.

## Step 8

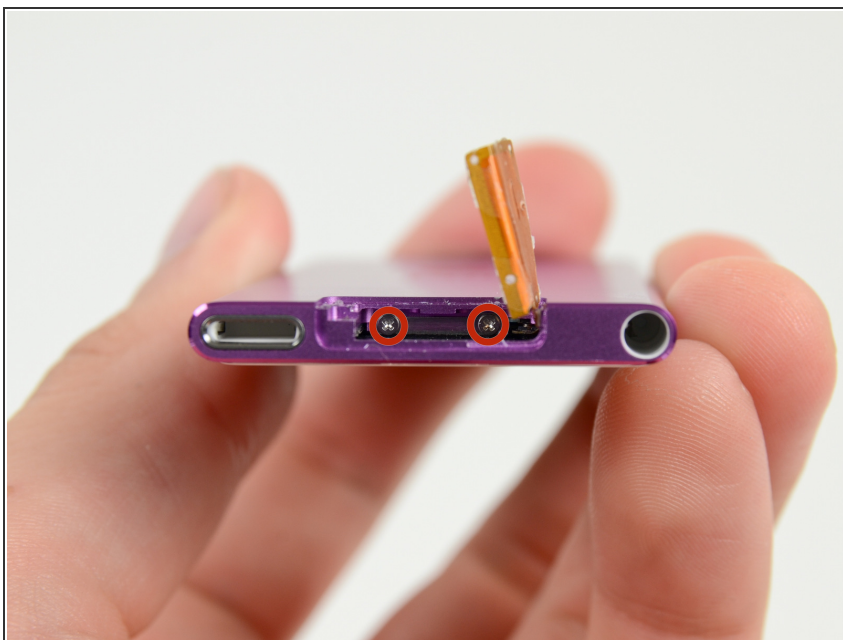


- Remove the two 2 mm Phillips #000 screws from the bottom of the case.

## Step 9



- Insert a plastic opening tool into the seam between the white plastic front panel and the rear case.
- Slide the opening tool along the edge of the front panel to free it from clips and adhesive.


## Step 10

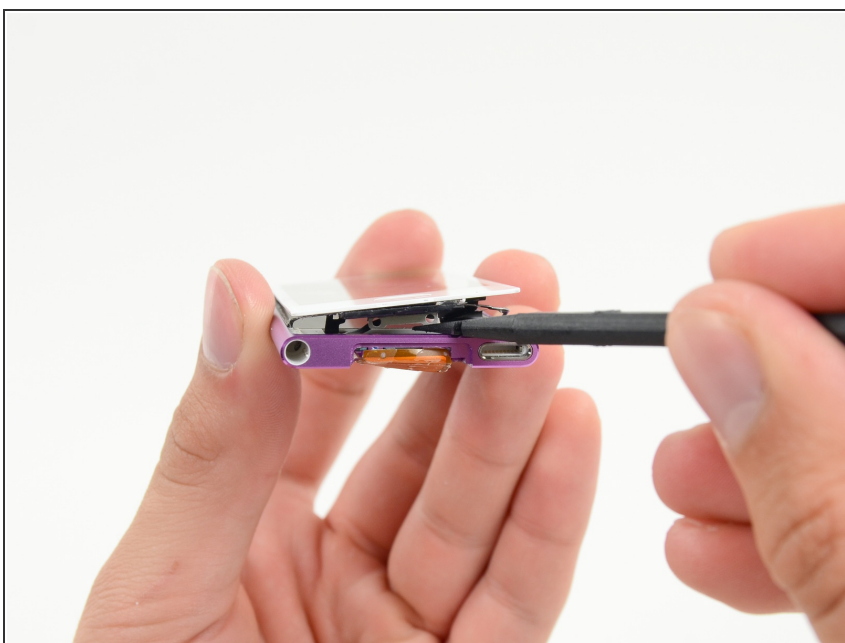

- Use a spudger to press the midframe screw tab up and out of the rear case.




## Step 11

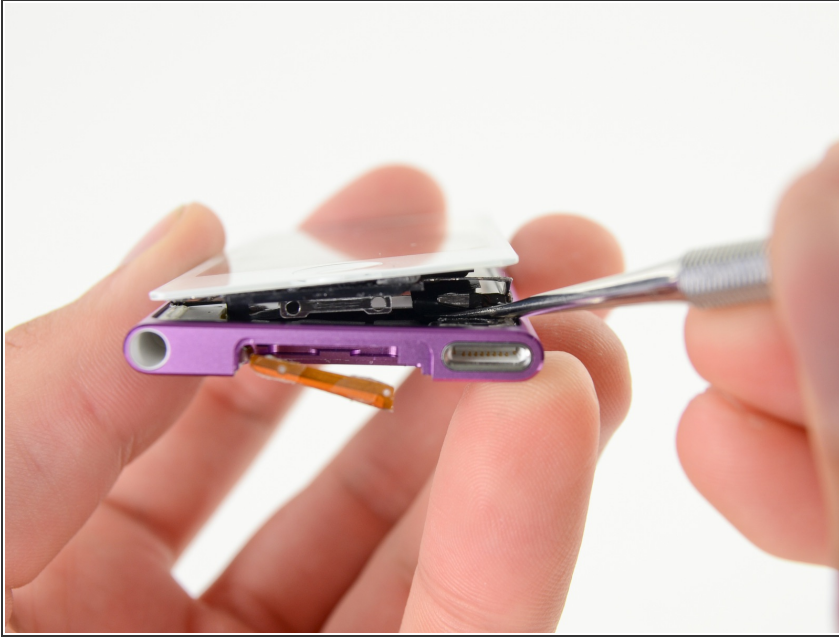

- Use a metal spudger to carefully pry near the Lightning connector and under **all** parts of the front panel assembly: the front glass/digitizer, the LCD display and the metal midframe.


**i** The adhesive under the metal midframe/display assembly is quite strong and the components are fragile, so go slowly and gently. Make sure you do not bend the LCD screen.

## Step 12

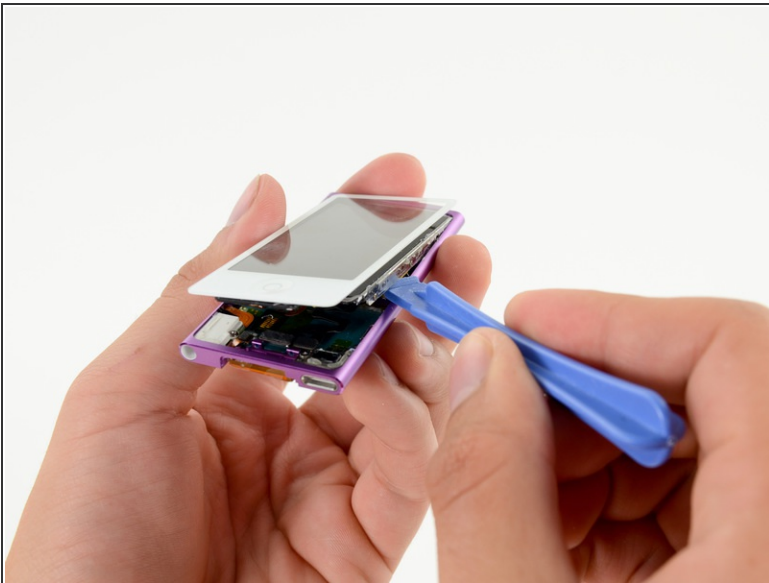

- Continue prying along the edges under the front panel assembly, releasing the clips and adhesive along the sides of the device.

## Step 13


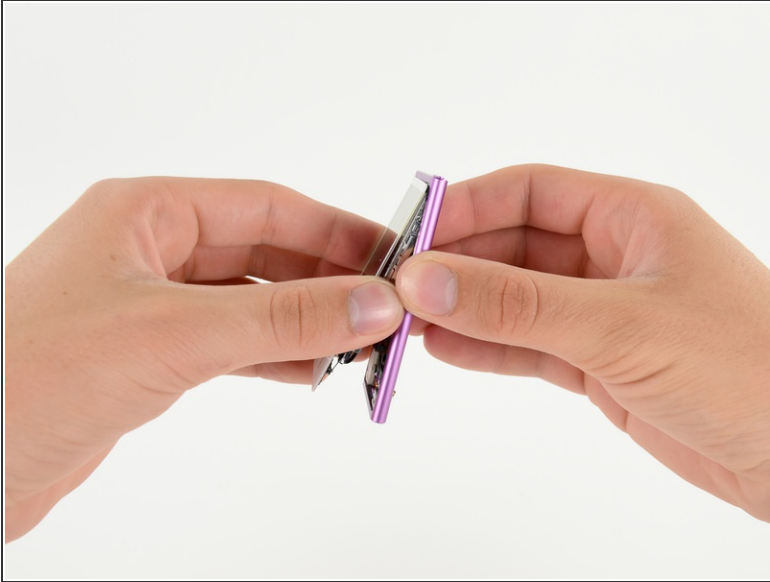


- Pull the front panel assembly slightly down and partially out of the device.

**i** You only need to open the device enough to gain access to the display cable connectors near the sleep/power button.

**!** **Do not** separate the two halves entirely, they are still connected by several cables.

## Step 14

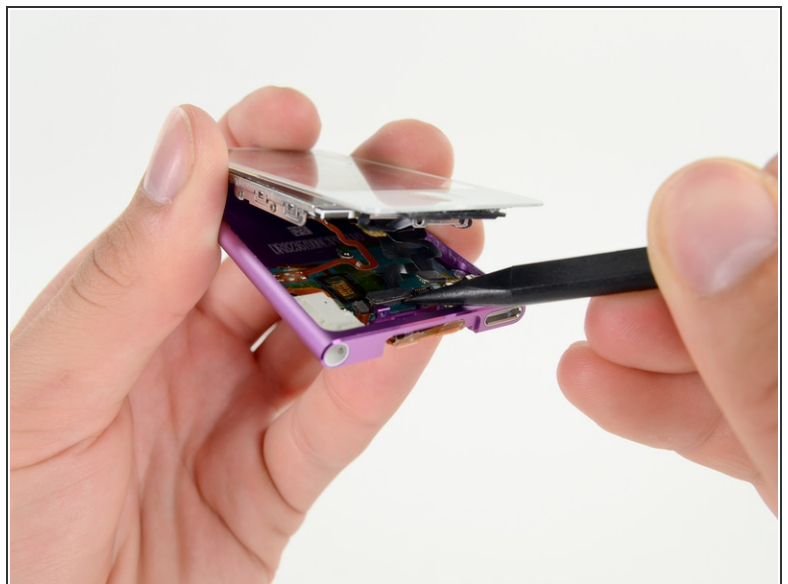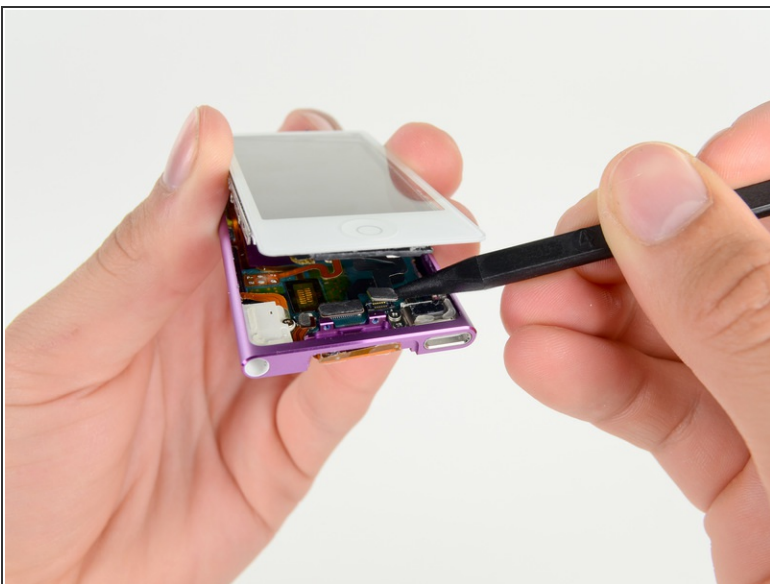


- Use a spudger to release the digitizer cable and display data cable connectors.


## Step 15




- Gently unfold the two halves of the device to access the internal components.

 **Do not** try to completely separate the two sections, yet, as they are still attached via a soldered cable.

## Step 16

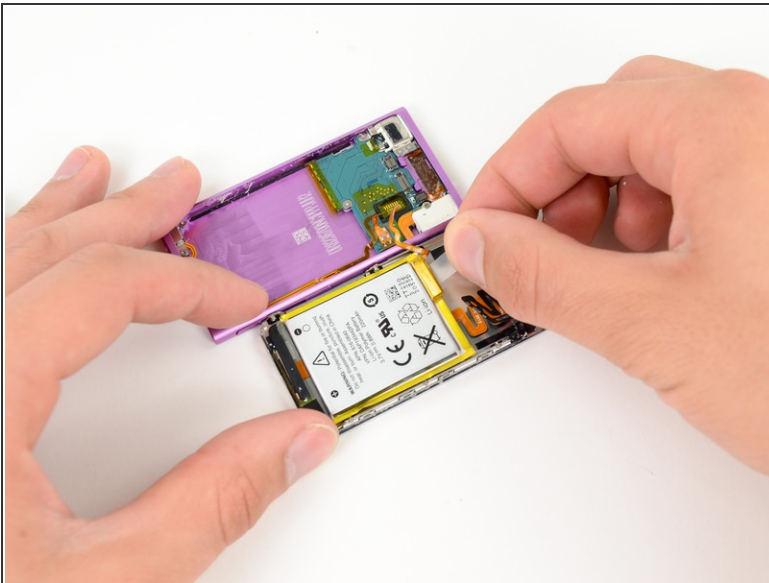

- Pull up on the battery pull tab to free the battery from its adhesive.

 Flip the battery over into the rear case for safekeeping.




## Step 17





- Completely separate the front panel assembly from the rest of the device.

## Step 18 — Bluetooth Antenna

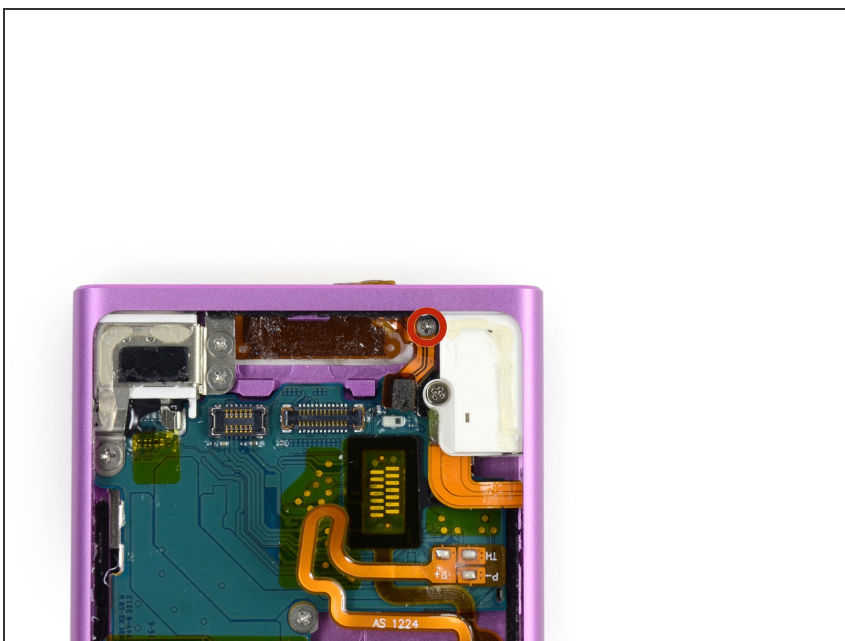

- Remove the 1.4 mm Phillips #000 screw from the antenna cable.

## Step 19

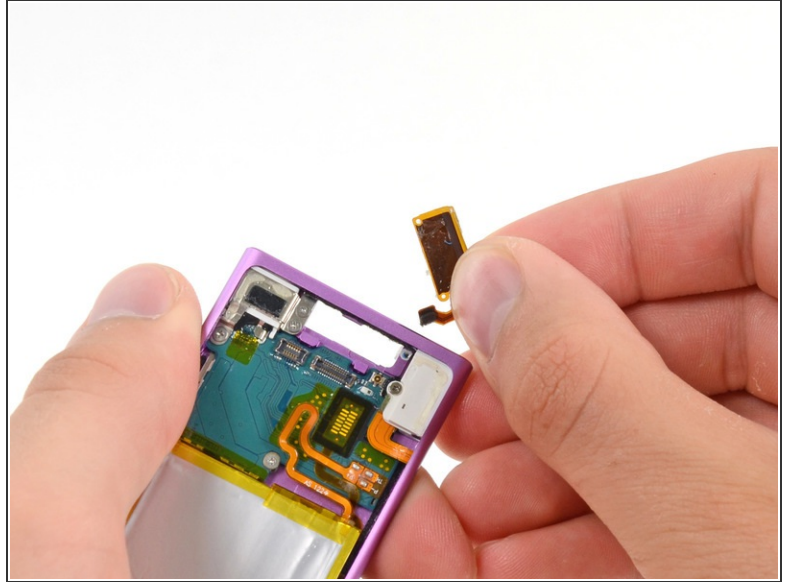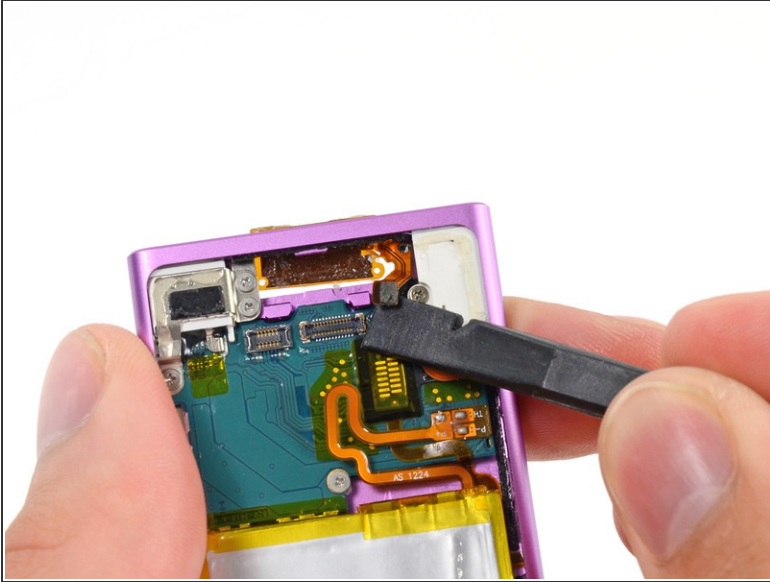

- Release the Bluetooth antenna connector cable with a spudger.
- Remove the antenna from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:22:43 AM.